

(21) Application No **0112276.1**

(22) Date of Filing **19.05.2001**

(71) Applicant(s)  
**AT & T Laboratories Cambridge Limited  
(Incorporated in the United Kingdom)  
24a Trumpington Street, CAMBRIDGE,  
CB2 1QA, United Kingdom**

(72) Inventor(s)  
**Alan Mycroft  
Paul Webster  
Phil Endecott**

(74) Agent and/or Address for Service  
**Marks & Clerk  
4220 Nash Court,  
Oxford Business Park South, OXFORD,  
OX4 2RU, United Kingdom**

(51) INT CL<sup>7</sup>  
**G06F 1/32**

(52) UK CL (Edition T )  
**H4P PDD**


(56) Documents Cited  
**US 5790874 A**


(58) Field of Search  
UK CL (Edition T ) **H4P PDD PDX**  
INT CL<sup>7</sup> **G06F 1/32, H04L 25/08 25/49**  
Online: **WPI, EPODOC, JAPIO, INSPEC**

(54) Abstract Title

**Improved power efficiency in microprocessors by choosing the values of unused bits so as to minimise the Hamming distance between successive data values**

(57) A method of reducing the power consumption of a microprocessor system which comprises a microprocessor 2 and a memory 4 connected by a bus 6. The memory 4 contains a plurality of data values, each represented by a number of bits, for transmission to said microprocessor 2 via the bus 6 and at least some of said data values contain unused bits. The method includes assigning values to said unused bits in such a way as to reduce the Hamming distance between successive data values by a greater extent than setting all of said unused bits to an arbitrary predetermined value. Preferably each unused bit is replaced with the bit value of the corresponding bit from an adjacent data value.

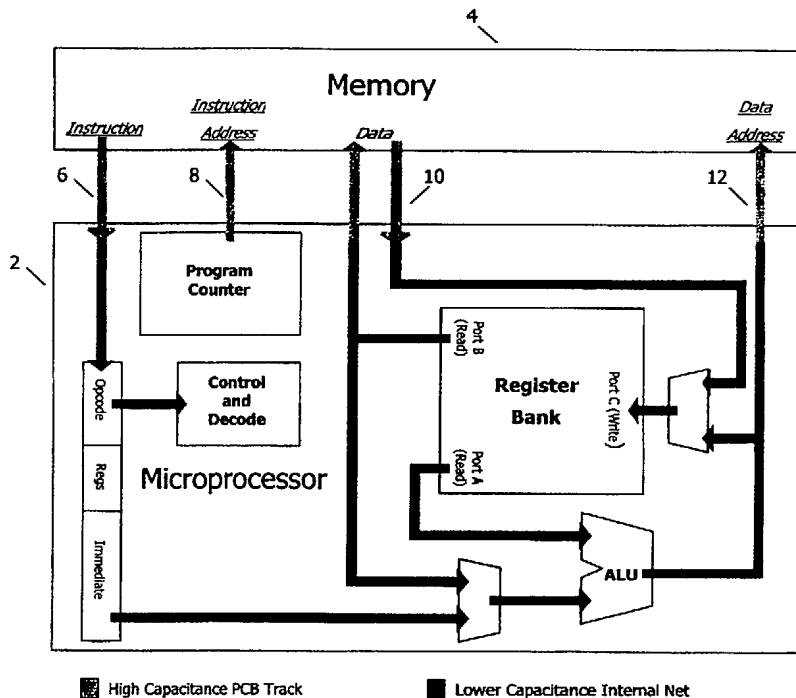

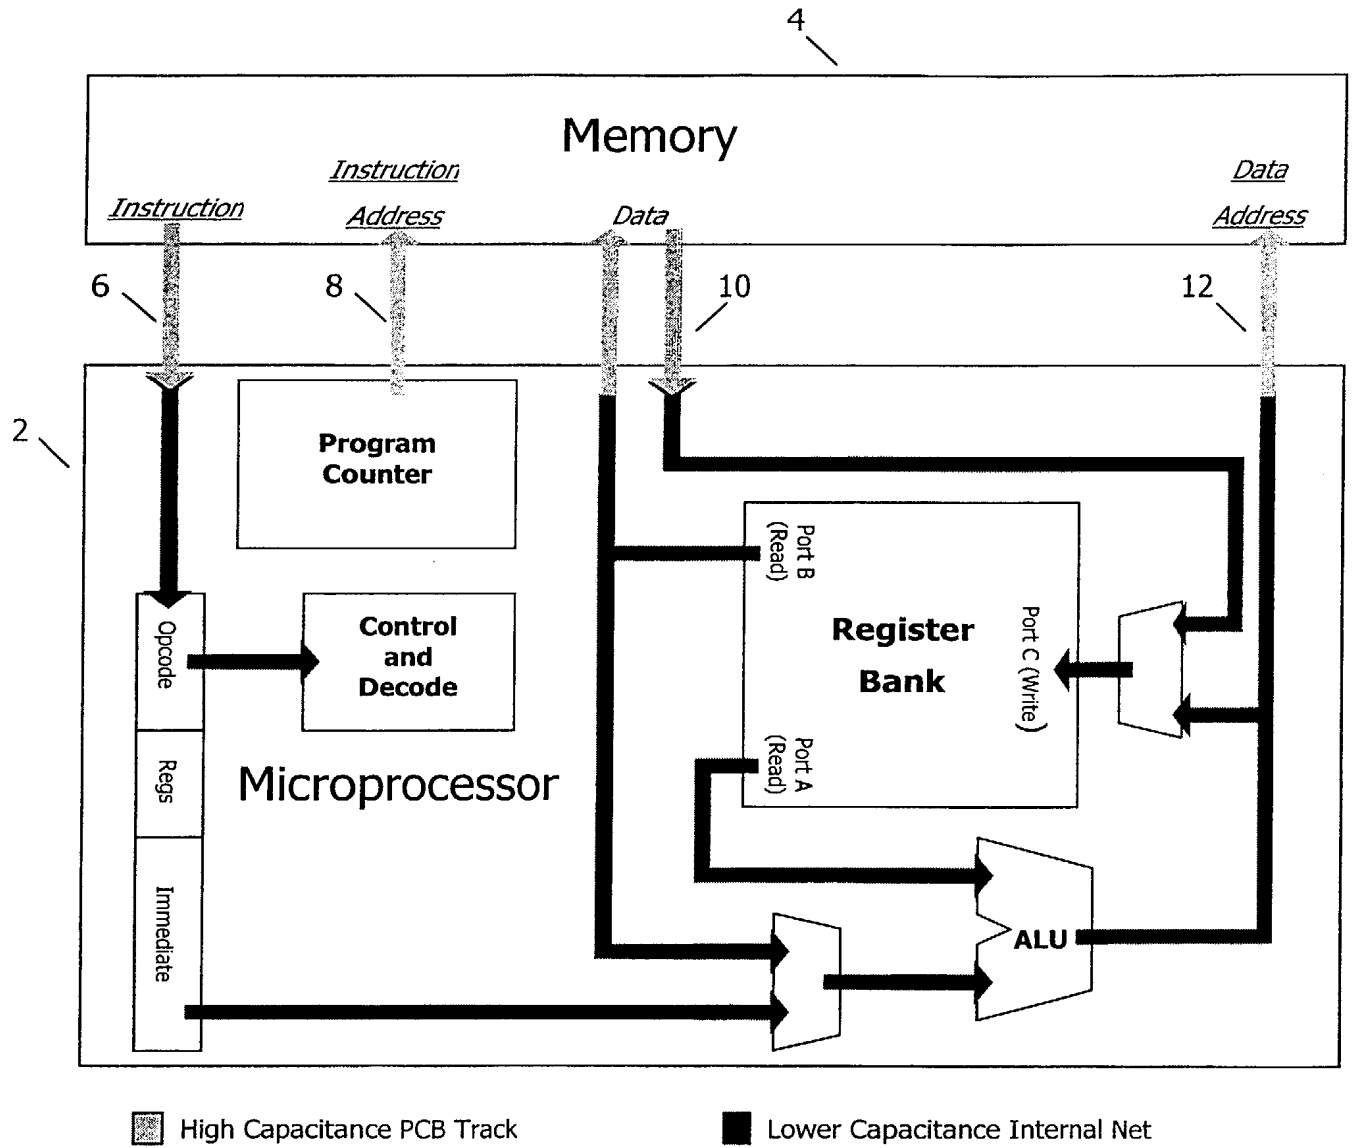

### Improved power efficiency in microprocessors

The invention relates to improved power efficiency in microprocessors.

The concept of Hamming distance will first be described. The Hamming distance between two binary numbers is the count of the number of bits that differ between them.

For example:

<b>Numbers decimal</b>	<b>in</b>	<b>Numbers in binary (inc. leading zeros)</b>	<b>Hamming distance</b>
4 and 5		0100 and 0101	1
7 and 10		0111 and 1010	3
0 and 15		0000 and 1111	4

Hamming distance is related to power efficiency because of the way that binary numbers are represented by electrical signals. Typically a steady low voltage on a wire represents a binary 0 bit and a steady high voltage represents a binary 1 bit. A number will be represented using these voltage levels on a group of wires, with one wire per bit. Such a group of wires is called a bus. Energy is used when the voltage on a wire is changed. The amount of energy depends on the magnitude of the voltage change and the capacitance of the wire. The capacitance depends to a large extent on the physical dimensions of the wire. So when the number represented by a bus changes, the energy consumed depends on the number of bits that have changed - the Hamming distance - between the old and the new value, and on the capacitance of the wires.

If one can reduce the average Hamming distance between successive values on a high-capacitance bus, keeping all other aspects of the system the same, the system's power efficiency will have been increased.

The capacitance of wires internal to an integrated circuit is small compared to the capacitance of wires fabricated on a printed circuit board due to the larger physical dimensions of the latter.

According to the invention there is provided a method of reducing the power consumption of a microprocessor system, a memory, a computer readable medium, computer programs, and a microprocessor system, as set out in the accompanying claims.

Embodiments of the invention will now be described, by way of example only, with reference to the accompanying figure, which shows the interconnections between a microprocessor and its memory.

In the accompanying figure, a microprocessor 2 is connected to memory 4 by a number of buses which are implemented on a printed circuit board (not shown).

The embodiments described here aim to reduce the average Hamming distance between successive values on the microprocessor-memory interface buses, shown as the lighter colored nets 6, 8, 10 and 12 in Figure 1, as this will have a significant influence on power efficiency.


Even in systems where microprocessor and memory are incorporated into the same integrated circuit the capacitance of the wires connecting them will be larger than average, so even in this case reduction of average Hamming distance on the microprocessor-memory interface is worthwhile.

Processor-memory communications perform two tasks. Firstly, the processor fetches its program from the memory, one instruction at a time. Secondly, the data that the program is operating on is transferred back and forth. The embodiments described here focus on instruction fetch, which makes up the majority of the processor-memory communications, but the invention is by no means limited to instruction fetch.

The instruction fetch bus 6 is the bus on which instructions are communicated from the memory 4 to the processor 2. Embodiments described here aim to reduce the average Hamming distance on this bus, i.e. to reduce the average Hamming distance from one instruction to the next.

It is common for instruction sets to be redundant, i.e. for instructions to contain information that is ignored by the processor. In particular some instructions contain unused bits.

For example in the instruction set considered here all instructions are 32 bits long. There are three instruction formats:

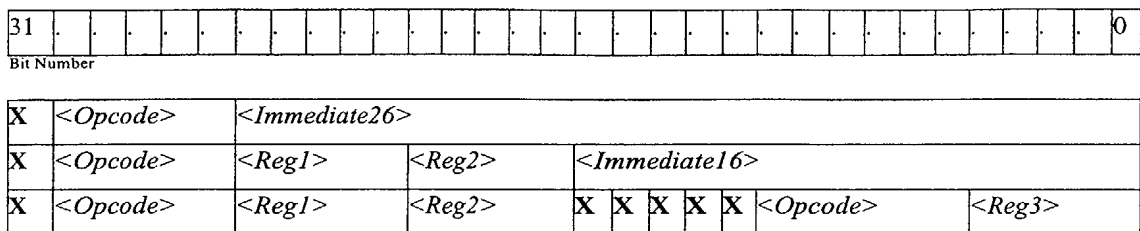

Bits marked 'X' are unused bits. The other bits convey useful information to the processor 2.

In two of these formats, 31 of the 32 bits are used. In the third format, 26 of the 32 bits are used. The remaining six bits are completely ignored by the processor 2. Some further features of our illustrative instruction set mean that other bits will also sometimes be unused, but the exact details of this have been omitted for clarity.

Any or all of the unused bits can be assigned to a combination of '0's or '1's without changing the meaning of the program.

Many other common processor 2 instruction sets also have unused bits. Typically, existing compiler tool chains will set all of the unused bits to '0'.

Although the processor 2 ignores these bits, they still contribute to the average Hamming distance for instruction fetches. The embodiments described here assign values to unused bits in a way that reduces the Hamming distance and hence maximizes the power efficiency.

For example, consider the following sequence of three instructions:

A:    **x**0111000011010001101000110100111  
 B:    **x**0000000010011110**XXXXX**01101100011  
 C:    **x**000110111100011110010011011100

Note the group of unused bits, marked '**XXXXX**', in instruction B. A conventional system might set all unused bits to '0' giving the following code:

A:    00111000011010001101000110100111  
 B:    000000001001111000000001101100011  
 C:    0000110111100011110010011011100

The Hamming distances between these instructions are:

From A to B: 16

From B to C: 22

One embodiment described here instead gives the unused bits the following values:

A:    00111000011010001101000110100111  
 B:    00000000100111101101001101100011  
 C:    0000110111100011110010011011100

In this case the Hamming distances have been reduced to:

From A to B: 13

From B to C: 21

This technique does not require any modifications to the microprocessor 2. Power is saved through only changing the program bit pattern.

A first embodiment of the invention uses the following method for assigning unused bits in a sequence of instructions:

For the first instruction in the program, set any unused bits to 0.

Considering each subsequent instruction in the program sequentially:

Considering each bit in this instruction:

If this bit is unused, assign the value of the corresponding bit from the previous instruction to it.

An example of this method will now be given using the following sequence of 8-bit instructions :

```

Bit number:  76543210
              01X01X01
              X001X010
              XX000X1X
              00X1X100
              1X001X00
              1X001X00
              00001X00
              01X0XX10
              10000XX1
              01X100X0
              1X1X00X0
              01X01000
              XX001X0X
              110X01X0
  
```

The changes to the bits of the first three instructions will now be given in detail.

The first instruction is 01X01X01.

Bit 7 of instruction is 0	⇒	Do nothing
Bit 6 of instruction is 1	⇒	Do nothing
Bit 5 of instruction is X	⇒	Set it to 0
Bit 4 of instruction is 0	⇒	Do nothing
Bit 3 of instruction is 1	⇒	Do nothing
Bit 2 of instruction is X	⇒	Set it to 0
Bit 1 of instruction is 0	⇒	Do nothing

Bit 0 of instruction is 1       $\Rightarrow$       Do nothing

After processing the first instruction it has been changed to 01001001.

The second instruction is **X001X010**.

Bit 7 of instruction is **X**       $\Rightarrow$       Set it to 0  
(Copied from bit 7 of first instruction)

Bit 6 of instruction is 0       $\Rightarrow$       Do nothing

Bit 5 of instruction is 0       $\Rightarrow$       Do nothing

Bit 4 of instruction is 1       $\Rightarrow$       Do nothing

Bit 3 of instruction is **X**       $\Rightarrow$       Set it to 1  
(Copied from bit 3 of first instruction)

Bit 2 of instruction is 0       $\Rightarrow$       Do nothing

Bit 1 of instruction is 1       $\Rightarrow$       Do nothing

Bit 0 of instruction is 0       $\Rightarrow$       Do nothing

After processing the second instruction it has been changed to 00011010.

The third instruction is **XX000X1X**.

Bit 7 of instruction is **X**       $\Rightarrow$       Set it to 0  
(Copied from bit 7 of second instruction)

Bit 6 of instruction is **X**       $\Rightarrow$       Set it to 0  
(Copied from bit 6 of second instruction)

Bit 5 of instruction is 0       $\Rightarrow$       Do nothing

Bit 4 of instruction is 0       $\Rightarrow$       Do nothing

Bit 3 of instruction is 0       $\Rightarrow$       Do nothing

Bit 2 of instruction is **X**       $\Rightarrow$       Set it to 0  
(Copied from bit 2 of second instruction)

Bit 1 of instruction is 1       $\Rightarrow$       Do nothing

Bit 0 of instruction is **X**       $\Rightarrow$       Set it to 0  
(Copied from bit 0 of second instruction)

After processing the third instruction it has been changed to 00000010.

The complete sequence of output instructions, after processing according to the method of the first embodiment, is given in the following table.

Input instruction	Output instruction
00 <b>X</b> 1 <b>X</b> 100	00010100
1 <b>X</b> 001 <b>X</b> 00	10001100
1 <b>X</b> 001 <b>X</b> 00	10001100
00001 <b>X</b> 00	00001100
01 <b>X</b> 0 <b>XX</b> 10	01001110
10000 <b>XX</b> 1	10000111
01 <b>X</b> 100 <b>X</b> 0	01010010
1 <b>X</b> 1 <b>X</b> 00 <b>X</b> 0	11110010
01 <b>X</b> 01000	01101000
<b>XX</b> 001 <b>X</b> 0 <b>X</b>	01001000
110 <b>X</b> 01 <b>X</b> 0	11000100

In this example, the mean inter-instruction Hamming distance after the unused bits have been assigned is 2.61. If all unused bits had been assigned to zero, then the mean inter-instruction Hamming distance would be 2.92, indicating a power saving of around 5%.

This method produces optimal results for straight-line code, i.e. code that has no branches in the flow-of-control. To take into account non-linear flow-of-control a more sophisticated method is required, as will be described below.

The following table shows an example of a fragment of pseudo high-level code and corresponding psuedo assembly language instructions:

if $a=1$ then  $b:=0$ ;  else $c:=1$ ; end if; $d:=d+1$ ; $e:=a$ ;	Compare $a$ with 1	(1)
	Branch, if not equal, to L1	(2)
	set $b$ to 0	(3)
	jump to L2	(4)
	L1: set $c$ to 1	(5)
	L2: add 1 to $d$	(6)
	set $e$ to $a$	(7)

There are two possible paths that control-flow can take through this code. If  $a$  is equal to 1 then the sequence of instructions executed is  $1 \Rightarrow 2 \Rightarrow 3 \Rightarrow 4 \Rightarrow 6 \Rightarrow 7$ . If  $a$  is not equal to 1 then the sequence is  $1 \Rightarrow 2 \Rightarrow 5 \Rightarrow 6 \Rightarrow 7$ .

The simple algorithm presented above would assign unused bits as if the execution sequence were  $1 \Rightarrow 2 \Rightarrow 3 \Rightarrow 4 \Rightarrow 5 \Rightarrow 6 \Rightarrow 7$ . This is not necessarily the optimal assignment for either of the actual execution sequences.

A second embodiment of the invention incorporates an unused bit assignment method that takes into account flow of control.

When an unused bit is both preceded and followed by used bits in the adjacent instructions, setting the unused bit to the value of either the preceding bit or the following bit will optimise Hamming distance. For example:

	Preceding bit	Unused bit	Following bit
A:	0	X	1
B:	1	X	1

In example A, the value of the preceding bit can be copied into the unused bit giving the bit-sequence 001, or the value of the following bit can be copied into the unused bit giving the bit-sequence 011. In both cases there is exactly one transition overall.

In example B, whichever bit's value is copied into the unused bit it will be a 1, giving no transitions in either case.

The first embodiment described above always copies from the preceding instruction. A modification of the first embodiment could run in reverse and always copy from the following instruction. The method of the second embodiment may copy from either.

In the example, instruction 2 is a point of divergence, because the following instruction can be either instruction 3 or instruction 5. Instruction 6 is a point of convergence, because the preceding instruction can be either instruction 4 or instruction 5.

Instructions at points of convergence have more than one possible preceding instruction. If we used only preceding instructions to determine how to assign unused bits we would have to make a decision about which of the two possible preceding instruction to use. Instead in these cases we can use the following instruction as the basis for unused bit assignment. So in the example, unused bits in instruction 6 are filled in from instruction 7.

The method of the second embodiment is based on the following three rules:

- 1) If an instruction has more than one preceding instruction, i.e. it is at a point of convergence, assign unused bits based on the following instruction.
- 2) If an instruction has more than one following instruction, i.e. it is at a point of divergence, assign unused bits based on the preceding instruction.
- 3) If an instruction has exactly one preceding and exactly one following instruction, i.e. it is neither a point of convergence nor of divergence,

then assign unused bits based on either the preceding or the following instruction.

The following table shows how this can be applied to the example shown above:


		Possible preceding instructions	Possible following instructions	Assign unused bits based on
compare 'a' with 1	(1)	(None)	2	2
branch if not equal, to L1	(2)	1	3, 5	1
set 'b' to 0	(3)	2	4	2 or 4
jump to L2	(4)	3	6	3 or 6
L1: set 'c' to 1	(5)	2	6	2 or 6
L2: add 1 to 'd'	(6)	4, 5	7	7
set 'e' to 'a'	(7)	6	(None)	6

In a variant embodiment an instruction's unused bits are based on a non-adjacent instruction. For example, instruction (5) could be based on instruction (2). This will typically occur at the target of an unconditional branch. In an implementation of this algorithm, such an assignment may be less practical than an assignment from an adjacent instruction because it requires that the implementation compute the target of the branch. In some cases, this may even be impossible, particularly when the branch target is computed at run time.

The following are hypothetical machine code bit patterns corresponding to these instructions, including some unused bits:


Compare <i>a</i> with 1	00001X00	(1)
Branch if not equal to L1	01X0XX10	(2)
Set <i>b</i> to 0	10000XX1	(3)
Jump L2	01X100X0	(4)
Set <i>c</i> to 1	1X1X00X0	(5)
Add 1 to <i>d</i>	01X01000	(6)
Set <i>e</i> to <i>a</i>	XX001X0X	(7)

In accordance with the second embodiment, combining the above two tables gives the following assignments for unused bits, in which the arrows show how unused bits are assigned from adjacent instructions.

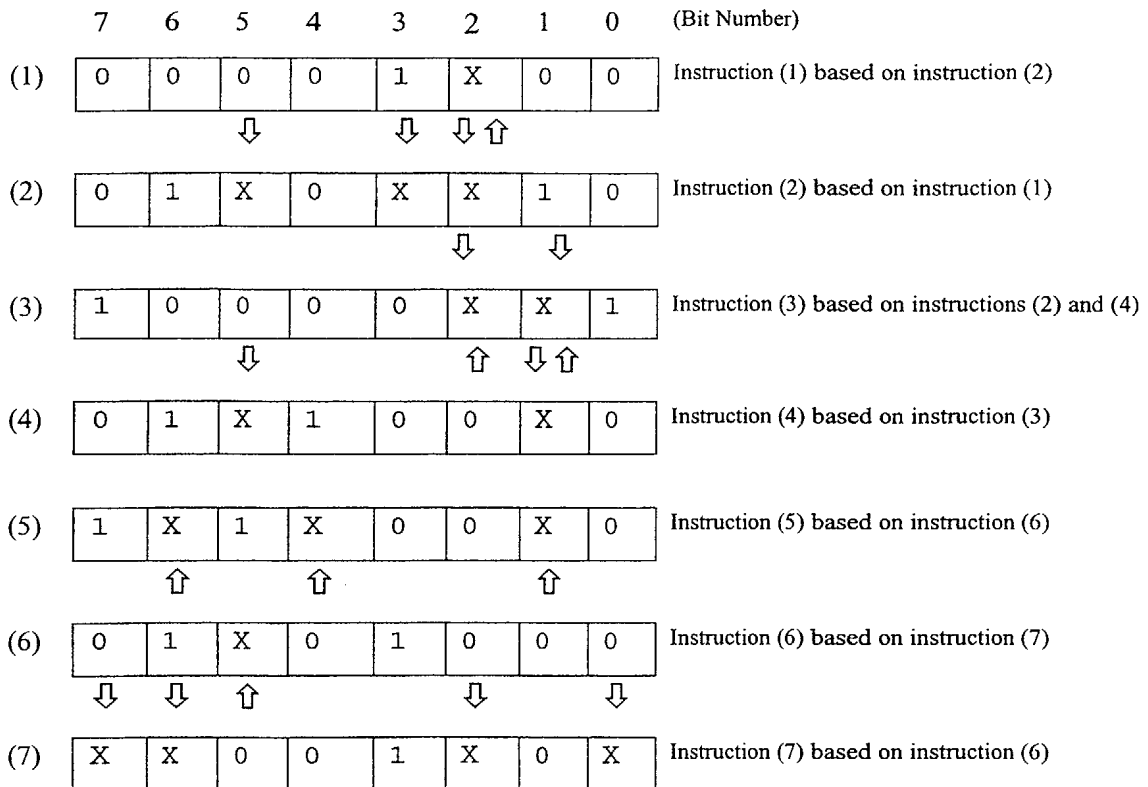

Where an arrow joins a used bit to an unused bit the unused bit can be assigned from that used bit. For example, bit 3 of instruction (2) can be assigned from bit 3 of instruction (1). When a used bit is connected to an unused bit, and that unused bit is connected in turn to other unused bits, the value can be propagated to all of them. For example, bit 1 of instruction (2) can be propagated to unused bit 1 in instructions (3) and (4).

Here is the complete list of the assignments in accordance with the second embodiment:

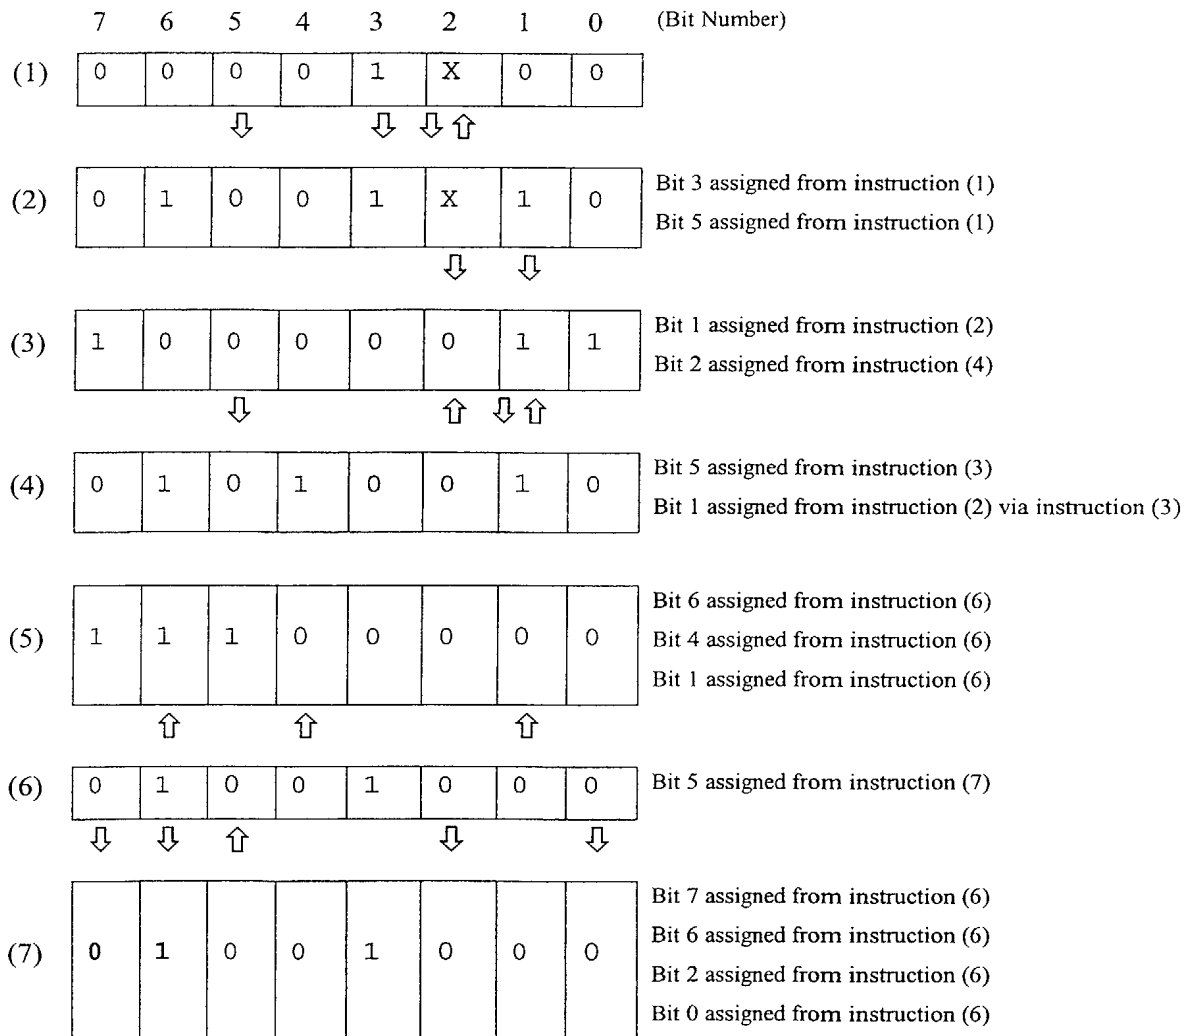

Some unused bits can remain unassigned after the method of the second embodiment has been carried out. This will occur when a bit is unused in all instructions between a point of convergence and a point of divergence. In the example, bit 2 of instructions (1) and (2) are unassigned for this reason. A third embodiment, given later, will “seed” the group of unused bits using a used bit in an adjacent instruction. In this example, bit 2 of instruction (2) could be seeded with a ‘0’ from instruction (3).

The mean inter-instruction Hamming distances for this example are:

Instruction sequence	Mean Hamming distance with unused bits...		
	All set to '0'	Set using first (simple) algorithm	Set taking flow of control into account
1⇒2⇒3⇒4⇒6⇒7	2.80	3.0	2.60
1⇒2⇒5⇒6⇒7	3.00	2.75	2.25
<i>Mean, assuming sequences are equally probable</i>	2.90	2.88	2.43

Difficulties arise when an instruction is both a point of convergence and a point of divergence. This will occur when a branch instruction leads to another branch instruction. The example in the following table illustrates this.

	... ..
(1)	jump L1
	... ..
(2)	jump L1
(3)	... ..
(4)	L1: branch if negative, to L2
(5)	... ..
(6)	L2:

Possible paths through this code are:

(1) ⇒ (4) ⇒ (5)

(1) ⇒ (4) ⇒ (6)

(2) ⇒ (4) ⇒ (5)

(2) ⇒ (4) ⇒ (6)

(3) ⇒ (4) ⇒ (5)

(3) ⇒ (4) ⇒ (6)

Instruction (4) is a point of both convergence and divergence, and the embodiments described so far offer no instruction on which it should base any unused bits that it may contain.

In a further variant embodiment, unused bit assignment is based on the values of bits in the multiple preceding and following instructions. In general an optimal assignment requires knowledge of the relative probabilities of each path. However if all of the preceding instructions, or all of the following instructions, are known and have the same bit value an optimal assignment is still possible. The third embodiment given later simply copies a value from an adjacent instruction.

Many processors incorporate an architectural feature called pipelining that affects the sequence in which instructions are fetched. In a pipelined processor, one or more instructions sequentially after a branch instruction will be fetched and then discarded if the branch is taken. For the purposes of this analysis these instruction fetches are as important as any other and need to be taken into account.

Considering the same example as before:

Compare $a$ with 1	(1)
Branch if not equal to L1	(2)
set $b$ to 0	(3)
Jump to L2	(4)
L1: set $c$ to 1	(5)
L2: add 1 to $d$	(6)
set $e$ to $a$	(7)

In a non-pipelined processor, the possible execution sequences for this code are  $1 \Rightarrow 2 \Rightarrow 5 \Rightarrow 6 \Rightarrow 7$  and  $1 \Rightarrow 2 \Rightarrow 3 \Rightarrow 4 \Rightarrow 6 \Rightarrow 7$ . For a pipelined processor that fetches one extra instruction after taken branches the possible execution sequences are  $1 \Rightarrow 2 \Rightarrow [3] \Rightarrow 5 \Rightarrow 6 \Rightarrow 7$  and  $1 \Rightarrow 2 \Rightarrow 3 \Rightarrow 4 \Rightarrow [5] \Rightarrow 6 \Rightarrow 7$ , where  $[n]$  indicates the fetched-but-discarded instruction.

The second and third embodiments can function correctly for pipelined processors with only a minor change. "Points of divergence", which were previously considered to be branch instructions, are now the instructions an appropriate distance *after* the branch instructions.

The method of the third embodiment can be summarised by the following set of instructions

Let  $C$  be the set of instructions that are at points of convergence. This means all instructions that are labelled as branch targets.

Let  $D$  be the set of instructions that are at points of divergence. This means all branch instructions, or if pipelining is being taken into account, all instructions that are the appropriate distance after a branch instruction.

Let  $E$  be the set of pairs  $(I, J)$  where  $I$  and  $J$  are instructions that satisfy either or both of the following conditions:

$J$  is not an element of  $C$ , and  $I$  immediately precedes  $J$

$J$  is not an element of  $D$ , and  $I$  immediately follows  $J$

*(Note: Each element of  $E$  corresponds to an arrow in figure, with  $I$  being the instruction at the tail of the arrow and  $J$  being the instruction at the head of the arrow).*

For each bit in turn:

Let  $B$  be the bit-number of the current bit

While there are any instructions where bit  $B$  is unused

While there is an element  $(I, J)$  of  $E$ , such that bit  $B$  of instruction  $J$  is unused and bit  $B$  of  $I$  is used

Set bit  $B$  of instruction  $J$  to the value of bit  $B$  of instruction  $I$

End-while

If there are still any instructions where bit  $B$  is unused

*(Note: This step implements the “seeding” process mentioned earlier)*

Find any two instructions  $I$  and  $J$ , such that bit  $B$  of instruction  $I$  is used, bit  $B$  of  $J$  is unused, and  $I$  and  $J$  are adjacent instructions [for the purposes of this step, the first instruction in the program should be considered to be preceded by and the last instruction followed by an instruction containing all zeros]

Set bit  $B$  of instruction  $J$  to the value of bit  $B$  of instruction  $I$

End-if

End-while

End-for

**CLAIMS:**

1. A method of reducing the power consumption of a microprocessor system which comprises a microprocessor and a memory connected by at least one bus, said memory containing a plurality of data values, each represented by a number of bits, for transmission to said microprocessor via said at least one bus, and at least some of said data values containing unused bits,

said method including assigning values to said unused bits in such a way as to reduce the Hamming distance between successive data values by a greater extent than setting all of said unused bits to an arbitrary predetermined value.

2. A method as claimed in claim 1, which further comprises the steps of:

considering each bit of each data value in turn and, if a particular bit of the considered data value is unused, assigning to said particular bit the value of the corresponding bit from an adjacent data value.

3. A method as claimed in claim 2, wherein said adjacent data value is adjacent to said considered data value in said memory.

4. A method as claimed in claim 2, wherein said adjacent data value is adjacent to said considered data value in the sequence in which said data values are read from said memory.

5. A method as claimed in any one of claims 2 to 4, wherein said adjacent data value precedes said considered data value.

6. A method as claimed in any one of claims 2 to 4, wherein said adjacent data value follows said considered data value.

7. A method as claimed in any preceding claim, wherein said data values represent instructions to said microprocessor.

8. A method as claimed in claim 7, which further comprises the step of determining whether each instruction is a point of divergence.

9. A method as claimed in claim 8, wherein if said microprocessor employs pipelining, then points of divergence are considered to be the instructions an appropriate distance after branch instructions.

10. A method as claimed in claim 8 or 9, wherein for instructions which are points of divergence, assignment of unused bits in the instruction is based on the preceding instruction.

11. A method as claimed in any one of claims 7 to 10, which further comprises the step of determining whether each instruction is a point of convergence.

12. A method as claimed in claim 11, wherein for instructions which are points of convergence, assignment of unused bits in the instruction is based on the following instruction.

13. A method as claimed in any one of claims 7 to 12, wherein for instructions which have only one possible preceding instruction and one possible following instruction, assignment of unused bits in the instruction is based on either the preceding or the following instruction.

14. A method as claimed in any one of claims 7 to 13, wherein in the case of an instruction which is both a point of divergence and a point of convergence, assignment of unused bits in the instruction is based on a consideration of bits in multiple preceding and following instructions.

15. A method as claimed in claim 14, wherein assignment of unused bits in the instruction is based on a consideration of the probabilities of different paths to and from said instruction.

14. A method as claimed in claim 14, wherein assignment of unused bits in the instruction is simply based on an adjacent instruction.
15. A method as claimed in any one of claims 7 to 14, wherein if any unused bits remain unassigned after the method has been carried out, then these unused bits are seeded using the corresponding bits from an adjacent instruction.
16. A method as claimed in any one of claims 7 to 15 which is substantially the same as that described in relation to the third embodiment of the invention described herein.
17. A memory comprising a sequence of data values which have been optimised in accordance with the method of any preceding claim.
18. A computer readable medium comprising a sequence of data values which have been optimised in accordance with the method of any one of claims 1 to 16.
19. A computer program comprising a sequence of data values which have been optimised in accordance with the method of any one of claims 1 to 16.
20. A computer program for carrying out the method of any of claims 1 to 16.
21. A microprocessor system comprising a microprocessor and a memory as claimed in claim 17.



INVESTOR IN PEOPLE

Application No: GB 0112276.1  
Claims searched: 1-21

Examiner: John Cullen  
Date of search: 7 January 2002

## Patents Act 1977 Search Report under Section 17

### Databases searched:

UK Patent Office collections, including GB, EP, WO & US patent specifications, in:

UK Cl (Ed.T): H4P (PDD, PDX)

Int Cl (Ed.7): G06F 1/32; H04L 25/08, 25/49

Other: Online: WPI, EPODOC, JAPIO, INSPEC

### Documents considered to be relevant:

Category	Identity of document and relevant passage	Relevant to claims
X	US 5790874 (TOSHIBA) See Figs. 1, 7, 12 and 15, lines 7-13 of col. 1 and line 49 of col 13 to line 21 of col. 14.	1, 7, 8, 11, 17-21

X	Document indicating lack of novelty or inventive step	A	Document indicating technological background and/or state of the art.
Y	Document indicating lack of inventive step if combined with one or more other documents of same category.	P	Document published on or after the declared priority date but before the filing date of this invention.
&	Member of the same patent family	E	Patent document published on or after, but with priority date earlier than, the filing date of this application.

**PUB-NO:** GB002375695A  
**DOCUMENT-IDENTIFIER:** GB 2375695 A  
**TITLE:** Improved power efficiency in  
microprocessors by choosing the values of  
unused bits so as to minimise the  
Hamming distance between successive  
data values  
**PUBN-DATE:** November 20, 2002

**INVENTOR-INFORMATION:**

NAME	COUNTRY
MYCROFT, ALAN	GB
WEBSTER, PAUL	GB
ENDECOTT, PHIL	GB

**ASSIGNEE-INFORMATION:**

NAME	COUNTRY
AT & T LAB CAMBRIDGE LTD	GB

**APPL-NO:** GB00112276

**APPL-DATE:** May 19, 2001

**PRIORITY-DATA:** GB00112276A (May 19, 2001)

**INT-CL (IPC):** G06F001/32

**EUR-CL (EPC):** G06F009/30 , G06F009/38

**US-CL-CURRENT:** 712/E9.028 , 712/E9.055

**ABSTRACT:**

A method of reducing the power consumption of a microprocessor system which comprises a microprocessor 2 and a memory 4 connected by a bus 6. The memory 4 contains a plurality of data values, each represented by a number of bits, for transmission to said microprocessor 2 via the bus 6 and at least some of said data values contain unused bits. The method includes assigning values to said unused bits in such a way as to reduce the Hamming distance between successive data values by a greater extent than setting all of said unused bits to an arbitrary predetermined value. Preferably each unused bit is replaced with the bit value of the corresponding bit from an adjacent data value.